


Erection Procedure for the

MODEL 31

BLUE STREAK LINOTYPE

MERGENTHALER LINOTYPE COMPANY
BROOKLYN 5, NEW YORK

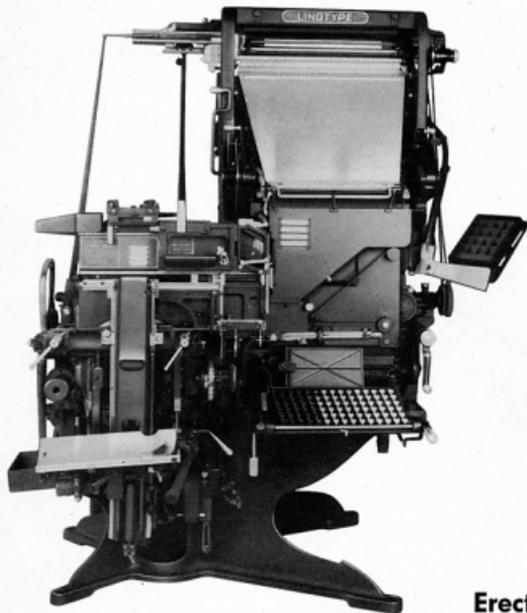


Erection Procedure for the

MODEL 31

BLUE STREAK LINO TYPE

**MERGENTHALER LINO TYPE COMPANY
BROOKLYN 5, NEW YORK**

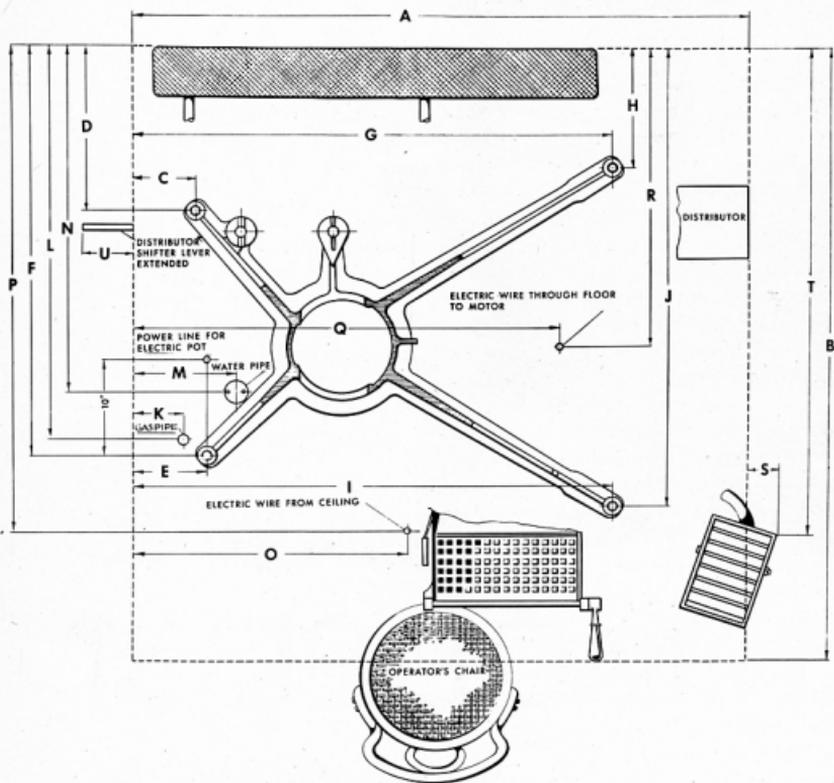

FLOOR PLAN DIMENSIONS: A—81 inches; B—62 inches; C—6 inches; D—16¾ inches; E—7 inches; F—41½ inches; G—47¼ inches; H—12½ inches; I—47¼ inches; J—46¾ inches; K—5 inches; L—41 inches; M—10 inches; N—34½ inches; O—27 inches; P—49 inches; Q—42¼ inches; R—29¾ inches; U—5 inches; Height—79 inches.

FOREWORD

EACH Linotype is completely erected in the factory and adjusted under actual operating conditions. When prepared for shipping, the Linotype is dismantled and carefully packed to avoid breakage and loss of factory adjustments due to shocks and jars of transportation handling. *In erecting the Linotype it is important that no adjustment be changed until certain that the original factory setting has been "lost."*

The Linotype is either "factory stripped," "stripped to base," or "stripped for overseas," according to the shipping distance, mode of transportation or clearance dimensions in the purchaser's plant. The dismantled parts are carefully sorted and associated assemblies are packed in the same crate for the convenience of the erector. On each crate there is a stenciled notation of the major assemblies contained therein. *The erection described in this booklet is for a "stripped to base" Linotype.*

This booklet has been prepared as a guide to the proper procedure of Linotype erection. In it is contained the correct sequence of operation for efficient precise erection.

While it is true that there are many possible methods of erection, it is also true that a divergence from the procedure prescribed herein will often result in difficult assembly, a considerable amount of readjustment or possible damage; the effect of each being an excessive time spent on the erection.

In some cases it may seem that there is an illogical or inconvenient sequence in certain phases of this procedure of erection. However, each step is taken for a definite reason and because of an important, if not always obvious relationship to other operations. As an example, the First Elevator Slide is not assembled to the Vise Frame until after the Face Plate has been applied to the machine because the Slide must be aligned with the Delivery Channel and Intermediate Channel. Similarly the Knife Block is not assembled to the Vise Frame until after checking "pull-up" and Ejector Blade alignment; and these checks should be made after the full weight of the Magazines and Distributor is on the machine. In both these cases it might seem convenient to apply the parts earlier than specified; however, as explained above, there are valid and important reasons for assembling them according to the prescribed order.

In preparing this booklet, we have endeavored to present the text in

as clear, readable form as possible, omitting the unnecessary details which would be more apt to confuse than inform the reader. Accordingly there is practically no mention of the many screws, bolts, nuts, springs, and other small parts used in the assembly. These parts will usually be found attached to a related part and their machine location will be obvious. In addition we have shortened and simplified part names, but only in those cases where there will be no resulting confusion.

This booklet covers the erection of the standard Linotype. Various other literature is available which provides detailed descriptions and adjustments of such special mechanisms as the Self-Quadder, Auto-Ejector Set, or Mohr Saw, and should be used in conjunction with this booklet when such extra equipment is included in a machine order.

The machine erection we describe is that of a Linotype equipped with Electric Pot. For information concerning Gas Pot application, see "Instructions to Linotype Operators and Machinists" the booklet which is furnished with each new machine. See this booklet also for detailed description of the machine application of the Emerson Geared Motor, the Knife Block adjustment, application of the Thermo-Blo Mold Cooler, adjustment of the Auto-Ejector Set and Electric Pot wiring information.

Important!

In order to use this booklet to the maximum advantage, it will be necessary to closely follow the text which establishes the *successive order of parts application*. The illustrations provided herein are presented merely to serve as an aid in identifying parts discussed in the text and to indicate the relationship of associated assemblies. To obtain greater clarity and show parts unobstructed it was necessary to illustrate the machine equipped with parts and units out of the proper sequence and in some cases to show parts completely detached from the machine. Necessarily, therefore, since the illustrations do not represent actual erection stages, the erector must follow the text for proper sequence and use the illustrations as a reference only.

During erection all bearing surfaces should be cleaned of slushing oil; all shafts should be oiled as they are applied; and when grease cup connections are present, the bearings should be coated with grease.

Sales-Service Department
Mergenthaler Linotype Company

ERECTION PROCEDURE

PLACE BASE in position.

SET ELECTRIC POT 7 adjacent to its assembled position in the machine as shown in (Figs. 1 and 2) and place Mouthpiece Temperature Control Box 13 (Fig. 6) in approximate location with the two control cables 4 and 5 (Fig. 2) behind left-hand front Column support boss 1. This is done at this time to avoid disconnecting the Control Box from the control cables as would be necessary if the Control Box were placed in position at the same time as the Pot is assembled to the machine.

ASSEMBLE Column and Magazine Elevating Shaft Bracket Support Bracket 15 (Fig. 8) to Base. Remove Dowels from Distributor Bracket Support 12 (Fig. 6) and use them to locate Elevating Shaft Bracket Support Bracket on Base.

ASSEMBLE Spaceband Lever 17 (Fig. 2) and Shaft into lower holes in Column; add Collar 22 (Fig. 1) to rear end of Shaft.

ASSEMBLE Elevator Transfer Cam Roll Lever 27 (Fig. 1), Shaft and Spring Arm into top holes in Column; add Elevator Transfer Lever 18 (Fig. 2) to front end of Shaft.*

ASSEMBLE Delivery Lever 24 (Fig. 2), Shaft and Spring Arm into center holes in Column; add Delivery Lever Cam Roll Arm 24 (Fig. 1) to rear end of Shaft.*

CONNECT Elevator Transfer Lever to Spaceband Lever by means of Turnbuckle.

ASSEMBLE Cam Shaft Bracket (L.H.) 6 (Fig. 1) to Base.

ASSEMBLE Driving Shaft and Bearing 19 (Fig. 1) to Base; slip Cam Shaft Bracket (R.H.) 20 on Driving Shaft and assemble to Base.

ASSEMBLE two Grease Cups and Tubes 17 and 21 (Fig. 1) to Driving Shaft Bearings.

*Do not loosen Screws in Elevator Transfer Cam Roll Lever or Delivery Lever as they are properly located at the factory.

ASSEMBLE Automatic Stop Forked Lever 23 (**Fig. 1**) to Cam Shaft Bracket (R.H.).

ASSEMBLE Vertical Starting Lever 25 (**Fig. 1**) to rear of Column.

ASSEMBLE Starting and Stopping Lever Bracket 30 (**Fig. 2**) to front of Column.

ASSEMBLE Starting and Stopping Lever 31 (**Fig. 2**), Connecting Rod 32 and Vise Automatic Stop Connecting Bar 33 to Bracket 30, and engage with Stud 10 in Automatic Stop Forked Lever.

ASSEMBLE Ejector Blade Controller Link Lift Guide 28 (**Fig. 2**) to Base; place Lift 26 in Guide and slip Roll over Stud in Lift.

ASSEMBLE Ejector Blade Controller Lever and Bracket 34 (**Fig. 2**) to Base, setting slotted end of Lever over Roll in Link Lift.

ASSEMBLE Justification Lever 2 (**Fig. 2**), Vise Closing Lever 39 (**Fig. 2**) and Shaft Sleeve by inserting Shaft 18 (**Fig. 1**) through lower bearings in Cam Shaft Brackets, setting Springs 12 and 16 into position. Nails 13 and 15 are for the purpose of holding Springs intact to facilitate assembling and should be kept in place until machine is fully assembled.

REMOVE Distributor Shifter Lever Spring Screw 5 (**Fig. 1**) from inside of Cam Shaft Bracket (L.H.) to facilitate assembly of cams.

ASSEMBLE Cams to Cam Shaft Brackets as follows: assemble Friction Clutch 10 (**Fig. 6**) temporarily and set Driving Shaft so that Clutch Arm is horizontal or left-hand arm when facing Clutch is slightly below center. With this position of Clutch Arm, set Cams in place so that they are in normal position, that is, with Automatic Stopping Pawl on Vertical Stopping Lever.

ASSEMBLE Delivery Lever Spring and Elevator Transfer Lever Spring to Hooks inside top of Column and to Spring Arms.

REPLACE Distributor Shifter Lever Spring Screw 5 (**Fig. 1**) to Cam Shaft Bracket (L.H.) (removed to provide clearance for Cams).

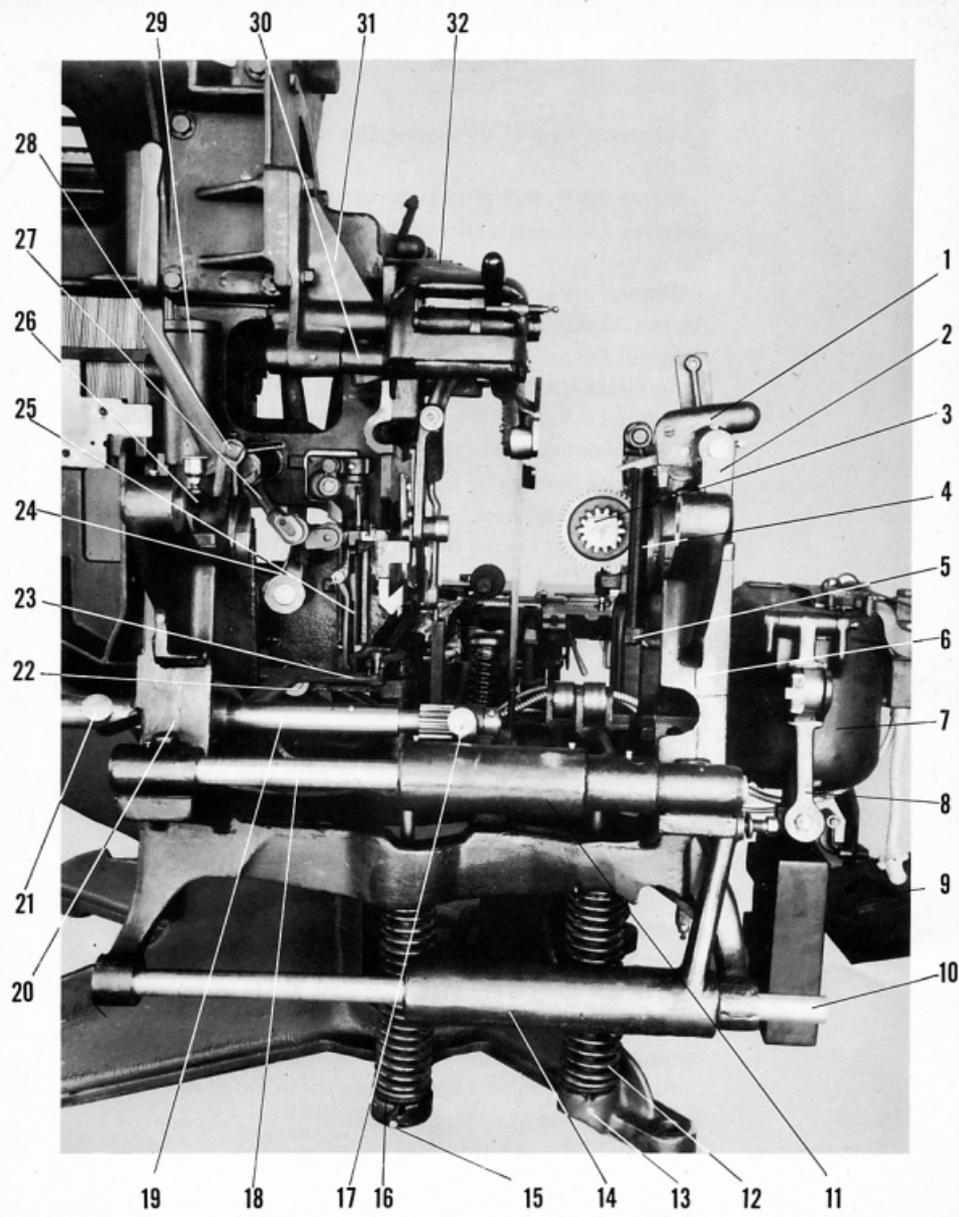


FIGURE 1

ASSEMBLE Cam Shaft Bracket Cap 26 (**Fig. 1**) to Bracket (R.H.).

INSERT Tie Rod 28 (**Fig. 1**) through Cam Shaft Bracket Cap and screw into Column, bringing up by fingers only to avoid introducing strains.

ASSEMBLE Vise Locking Stud (R.H.) 23 (**Fig. 2**) to Column. See that Washers are properly placed between Stud Shoulder and Column.

ASSEMBLE Vise Locking Screws 25 and 27 (**Fig. 5**) to Vise.

ASSEMBLE Vise 36 (**Fig. 2**) by inserting Vise Frame Shaft through front bearings of Base and bearings of Vise Frame. See that Pot Leg Bushings 37 are put in as marked (L.H. and R.H.) with oil holes to the front.

ASSEMBLE Pot Lever 8 (**Fig. 1**) to Shaft on rear top of Pot and to lower lug of Pot.

ASSEMBLE Pot to machine. Do not loosen rear or top Pot Leg Adjusting Screws as they are set at factory for correct lock-up position.

ASSEMBLE Pot Balancing Spring Base 15 (**Fig. 13**) to machine Base and place Pot Balancing Spring 9 (**Fig. 2**) in position.

CLAMP Mouthpiece Temperature Control Box 13 (**Fig. 6**) to Base.

ASSEMBLE Mold Gear Arm 2 (**Fig. 1**) to Cam Shaft Bracket (L.H.). See that set screw in square pinion 3 is facing upwards, and that Automatic Stopping Pawl is within six inches of Vertical Stopping Lever or normal Cam position when assembly is made.

SET Mold Gear Arm Support 3 (**Fig. 2**) on Base and slide forward so that upper bearing face touches finished surface on Mold Gear Arm. Screw up with fingers only, seeing that upper and lower bearing surfaces are both set square, then tighten with wrench.

ASSEMBLE Crucible Temperature Control Relay and Switch Box 9 (**Fig. 1**) to Mold Gear Arm 2.

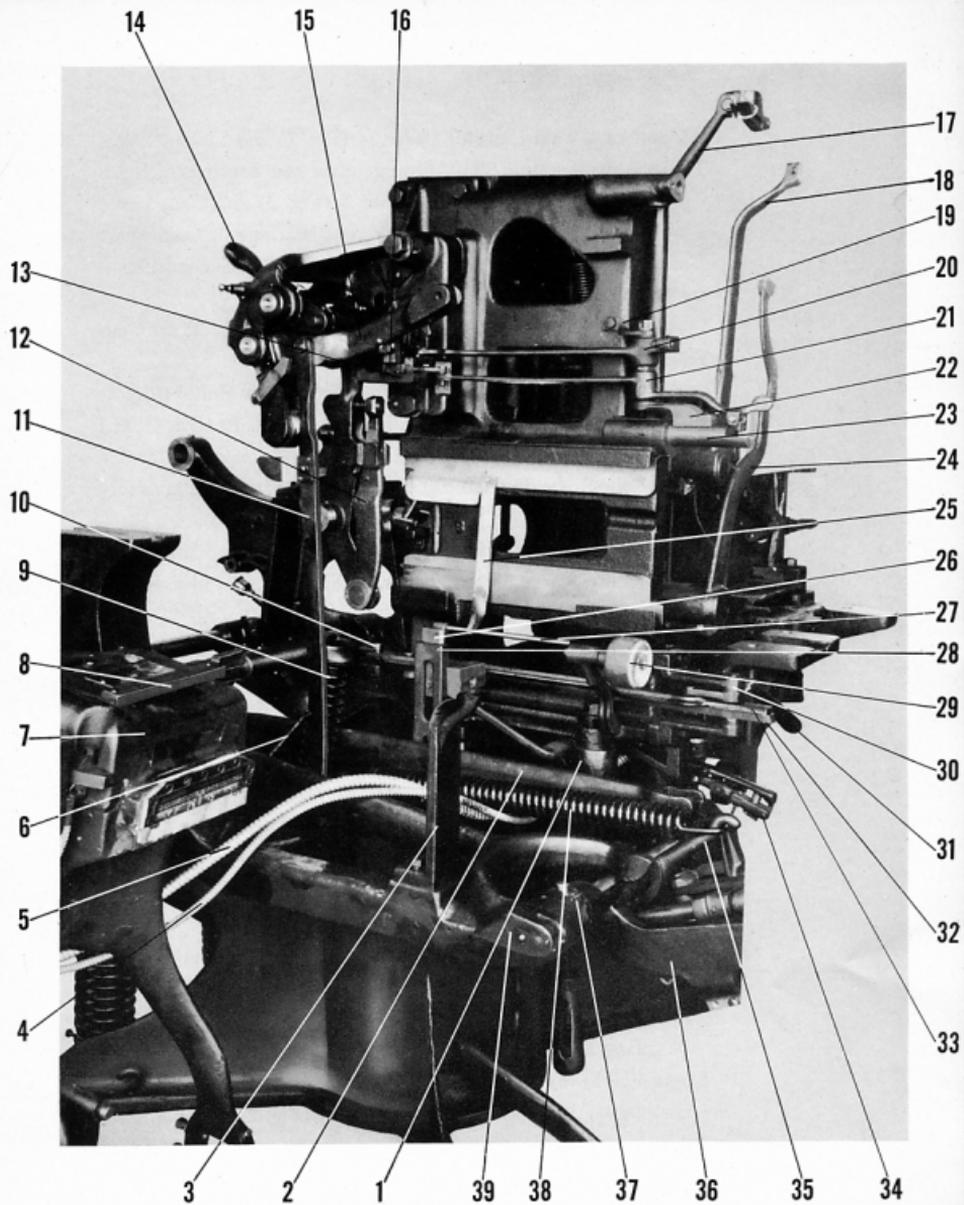


FIGURE 2

ASSEMBLE First Elevator Lever 14 (**Fig. 1**) and Ejector Lever 7 (**Fig. 3**) by inserting Shaft through lower rear bearings of Base.

ASSEMBLE Second Elevator Lever 8 (**Fig. 3**) and Cam Lever 2 by inserting Shaft through upper rear bearings in Cam Shaft Brackets; assemble Adjusting Spring and Bolt 3 to Second Elevator Lever and to Cam Lever.

ASSEMBLE Second Elevator Safety Pawl 6 (**Fig. 3**) to Cam Shaft Bracket (R.H.).

ASSEMBLE Second Elevator Starting Spring and Bolt 4 (**Fig. 3**) by inserting lower end through hole in Cam Shaft Bracket (L.H.) and secure to Second Elevator Cam Lever 2. Second Elevator Lever 8 should be down in transfer position to facilitate assembly of Spring.

ASSEMBLE Spring Hook 35 (**Fig. 2**) to Vise Frame and attach Vise Balance Spring 38 to Pot Balance Spring Base and to Spring Hook.

ASSEMBLE First Elevator Cam to left-hand end of Cam Shaft, and Auxiliary Lever to lower Shaft 10 (**Fig. 1**).

ASSEMBLE Intermediate Shaft Bushing Bracket 6 (**Fig. 13**) to Column as shown at 22 (**Fig. 6**).

ASSEMBLE Distributor Bracket Support 12 (**Fig. 6**) to right-hand surface of Magazine Elevating Shaft Bracket Support Bracket.

ASSEMBLE Distributor Bracket 25 (**Fig. 6**) to Column and to Distributor Bracket Support.

ASSEMBLE Pot Pump Bracket 32 (**Fig. 1**) to Column.

ASSEMBLE Pot Pump Bracket Support Bracket 31 (**Fig. 1**) to Distributor Bracket, aligning it with two Shafts in Pot Pump Bracket before tightening screws.

ASSEMBLE Pot Pump Lever 15 (**Fig. 2**) and Pot Pump Spring Lever 30 (**Fig. 1**) to lower Shaft in Pot Pump Bracket.

ASSEMBLE Mold Cam Lever Handle 14 (**Fig. 2**) to upper Shaft

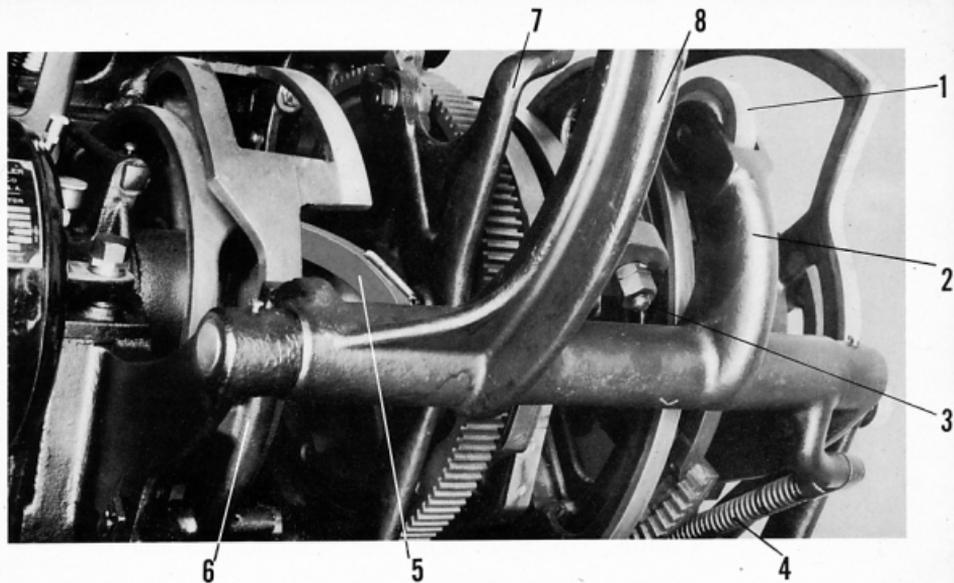


FIGURE 3

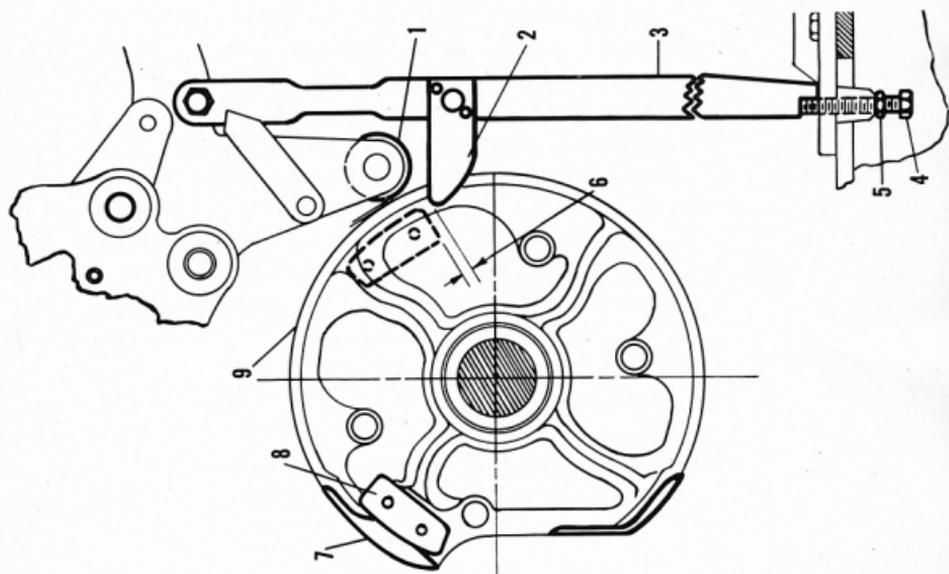


FIGURE 4

in Pot Pump Bracket.

ASSEMBLE Mold Cam Lever 12 (**Fig. 2**) to Shaft in Mold Cam Lever Handle, making certain that Cam Roll is in position.

ASSEMBLE Pot Pump Lever Spring Adjusting Hook Bracket and Adjusting Hook 9 (**Fig. 5**) to Base under Column.

ATTACH Pot Pump Spring to Spring Lever 30 (**Fig. 1**) and Adjusting Hook 9 (**Fig. 5**). Turn Cams for lowest position of Spring Lever to facilitate assembling.

ASSEMBLE Pot Pump Lever Stop Lever Bracket 13 (**Fig. 2**) to Pot Pump Bracket positioning it so that there is a clearance of 1/64" between Stop Levers 16 and Pot Pump Lever Catch Block. Cams should be in normal position when adjustment is made.

ASSEMBLE Operating Lever 21 (**Fig. 2**) and Pot Pump Safety Stop Lever 20 to Bracket 22 on Vise Locking Stud, and secure to Column by means of Stud Support 19.

ASSEMBLE Pot Pump Safety Stop Rod 8 (**Fig. 2**) to front top of Pot.

ASSEMBLE Distributor Shifter Lever Hub 1 (**Fig. 1**) by inserting Shaft through bearings in Mold Gear Arm 2.

ATTACH Distributor Shifter Lever Spring 4 (**Fig. 1**) to Lever Hub and to Spring Screw.

ASSEMBLE Pot Pump Lever Retaining Rod 3 (**Fig. 4**) to Pot Pump Lever and connect Spring 6 (**Fig. 2**) to Pot Balance Spring Base; then rotate Cams until there is only slight clearance 6 (**Fig. 4**) (3/4" or less) between Retaining Rod Shoe 2 and Cam 8 (roller 1 should now be on high point of Cam 7); adjust Support Screw 4 until Retaining Rod 3 is just free, and lock in position with Lock Nut 5.

ASSEMBLE Vise Jaw (L.H.) Adjusting Bar 9 (**Fig. 13**) to Vise Cap as shown at 38 (**Fig. 5**).

ASSEMBLE Vise Jaw (L.H.) Wedge Bracket 23 (**Fig. 5**) to Vise Cap and to upper part of Vise Frame, connecting lower end of

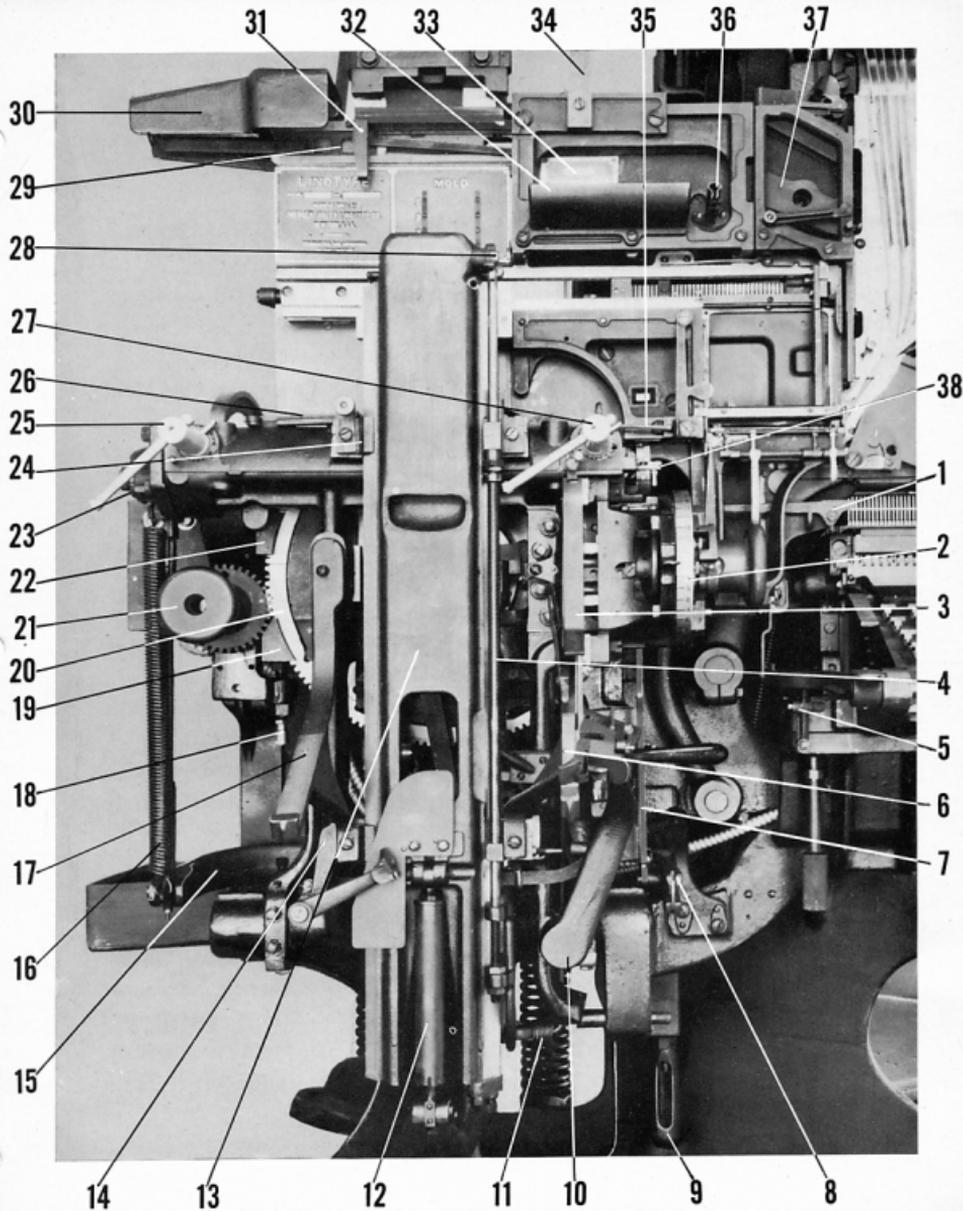


FIGURE 5

Wedge to Vise Closing Lever 15.

ATTACH Vise Jaw (L.H.) Wedge Spring 16 (**Fig. 5**) to Wedge Bracket Bolt and to lower end of Wedge.

ASSEMBLE Vise Automatic Stop Rod 2 (**Fig. 13**) and Spring 3 to Vise Frame.

ASSEMBLE Auxiliary Line Safety Rod 12 (**Fig. 13**) and Spring to top of Vise Cap as shown at 35 (**Fig. 5**).

INSERT Mold Disk Slide into dovetail seat of Column.

REMOVE Mold Disk Stud Plate from Slide and assemble Mold Disk 20 (**Fig. 5**) to Slide; reassemble Stud Plate to Slide.

ASSEMBLE Mold Disk Guides (Upper) 22 (**Fig. 5**) and (Lower) 19 to Mold Disk Slide. Adjust Guides so that front face of Mold Disk just touches the Guides.

ASSEMBLE Mold Disk Guide Lower Lubricator 18 (**Fig. 5**) to Mold Gear Arm.

CLEAN Molds and assemble in Mold Disk.

ASSEMBLE Back Knife to Mold Disk Slide. Check adjustment of Back Knife to back face of Molds.

INSERT Ejector Blade Controller 25 (**Fig. 2**) into Ejector Slide; assemble Link Rod 27 through Controller into Link Lift 26.

ASSEMBLE Back Mold Wiper 29 (**Fig. 2**) to left-hand front Column support boss. Adjust face of Wiper so that it rests squarely against the back of Mold Disk and is compressed $\frac{1}{8}$ " when the Mold Slide is in normal position.

ASSEMBLE Ejector Lever Link 5 (**Fig. 3**) by inserting in rear of Ejector Slide and hooking on Ejector Lever 7.

ASSEMBLE Mold Disk Slide Safety Stop Link 4 (**Fig. 13**) and Bracket 5 to upper Mold Disk Guide 22 (**Fig. 5**) and to Mold Gear Arm.

ASSEMBLE Mold Disk Pinion 21 (**Fig. 5**) to Mold Turning Shaft.

ASSEMBLE Stationary Front Guide Holder Bracket (L.H.) 5 (**Fig. 10**) to Column.

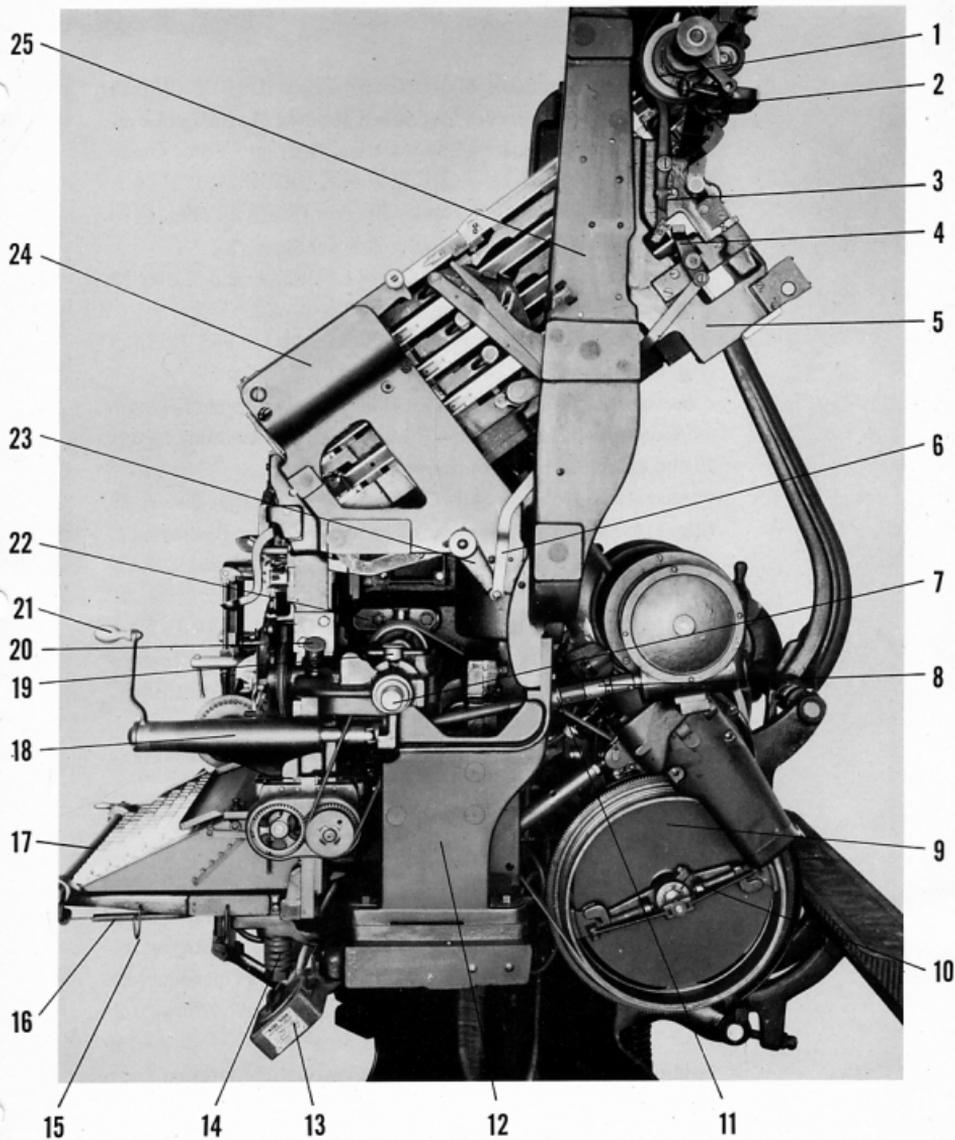


FIGURE 6

ASSEMBLE Automatic Matrix Guard Lever (L.H.) 8 (Fig. 7) and (R.H.) 3, Stop Lever 9, Magazine Elevating Shaft Pawl Lever Rod Lever 14 and Shaft 13 by inserting Shaft into Front Guide Holder Bracket (L.H.).

ASSEMBLE Front Guide Holder Bracket (R.H.) 24 (Fig. 6) to Distributor Bracket and Distributor Bracket Support.

ASSEMBLE Distributor Screw Guard Lever Operating Lever 23 (Fig. 6) to end of Shaft 13 (Fig. 7).

ASSEMBLE Channel Entrance Brackets (L.H. and R.H.) 5 (Fig. 6) to Distributor Bracket.

REMOVE Link Top Support 10 (Fig. 7) and assemble Distributor Screw Guard Lever Link 6 (Fig. 6) to Lever Operating Levers 23 and 4; replace Link Top Support 10 (Fig. 7).

ASSEMBLE Delivery Air Cushion Cylinder and Piston 29 (Fig. 1) to rear of Column and to Delivery Lever Cam Roll Arm 24.

ASSEMBLE Driving Pulley and Guard 9 (Fig. 6) and Driving Shaft Friction Clutch 10 to Driving Shaft.

ASSEMBLE Motor to Cam Shaft Bracket and Cap (R.H.), adjusting for proper mesh by means of screw bushings. See "Instructions to Linotype Operators and Machinists" for more detailed description of this assembly.

ASSEMBLE Gear Guard and Gear Guard Support to Motor and to Cam Shaft Bracket (R.H.).

REMOVE Elevating Shaft 19 (Fig. 8) from Elevating Shaft Bracket 9 and assemble Support 18 to Bracket.

ASSEMBLE Bracket and Support to Elevating Shaft Bracket Support Bracket 15 (Fig. 8); and assemble Tie Rod 14.

ASSEMBLE Elevating Shaft to Bracket and set timing as follows: remove Spring Drum Shaft Gear Cover 11 (Fig. 8) and insert Magazine Elevating Shaft 19 into Bracket 9. Allow Stop Pawl 7 to enter the first or lowest slot in Stop Shoe 6 as indicated at position A. Drilled spot 13 on the flat portion of Elevating Gear

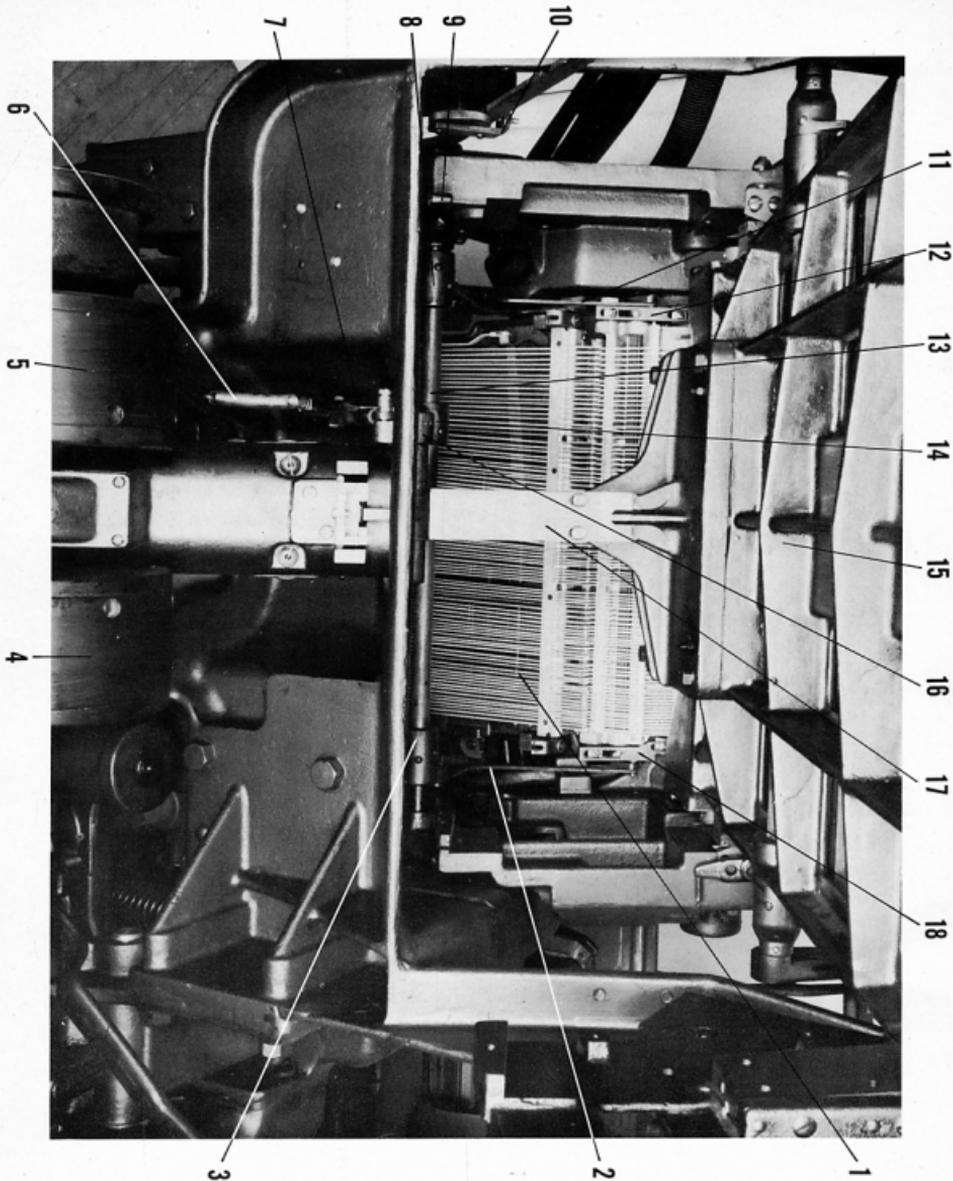


FIGURE 7

Segment 10 should line up with spot 12 on rim of Bracket 9 as shown at position B. If this condition does not exist, Elevating Shaft 19 will have to be pulled up far enough to disengage Rack 8 from Gear Segment 10 and the Segment turned sufficiently to result in the described position B when Shaft 19 is lowered into position A. Reassemble the Cover 11.

ASSEMBLE Intermediate Shaft 7 (**Fig. 6**) through bearings in the Distributor Bracket Support and Intermediate Shaft Bushing Bracket. As the shaft is pushed through add Keyboard Driving Pulley and Belt, Assembler Driving Belt Gear and Intermediate Shaft Driving Pulley.

ASSEMBLE Keyboard Rod (Long) Frame 1 (**Fig. 7**) to Distributor Bracket Support and Intermediate Shaft Bushing Bracket, making certain that Spacer 13 (**Fig. 13**) is in position between Bushing Bracket and Frame. Fasten Frame to Stationary Front Guide Holder Brackets with Frame Brackets (R.H.) 7 (**Fig. 13**) and (L.H.) 8.

ASSEMBLE Keyboard to Base. Make certain that brass plug is in front of set screw so as to protect threads on pivot screw 14 (**Fig. 6**).

DRIVE Keyboard Locking Screw 6 (**Figure 12**) into hole in Base and lock Keyboard in position.

ASSEMBLE Keyboard Stop 5 (**Fig. 5**) to left-hand side of Keyboard Frame.

ASSEMBLE two Copy Hooks 15 (**Fig. 6**) to Keyboard Frame.

ASSEMBLE Intermediate Shaft Bearing Grease Cup 19 (**Fig. 6**) to Distributor Bracket Support.

ASSEMBLE Assembler Driving Belt-Driven Gear and Pulley 4 (**Fig. 9**) to Distributor Bracket Support.

ASSEMBLE Assembler Driving Belt-Driven Gear Shaft Grease Cup 20 (**Fig. 6**) to Distributor Bracket Support.

ASSEMBLE Assembler Driving Belt Gear Guard 10 (**Fig. 13**) and Plate 11 to Distributor Bracket Support as shown at 6 and 5 (**Fig. 11**).

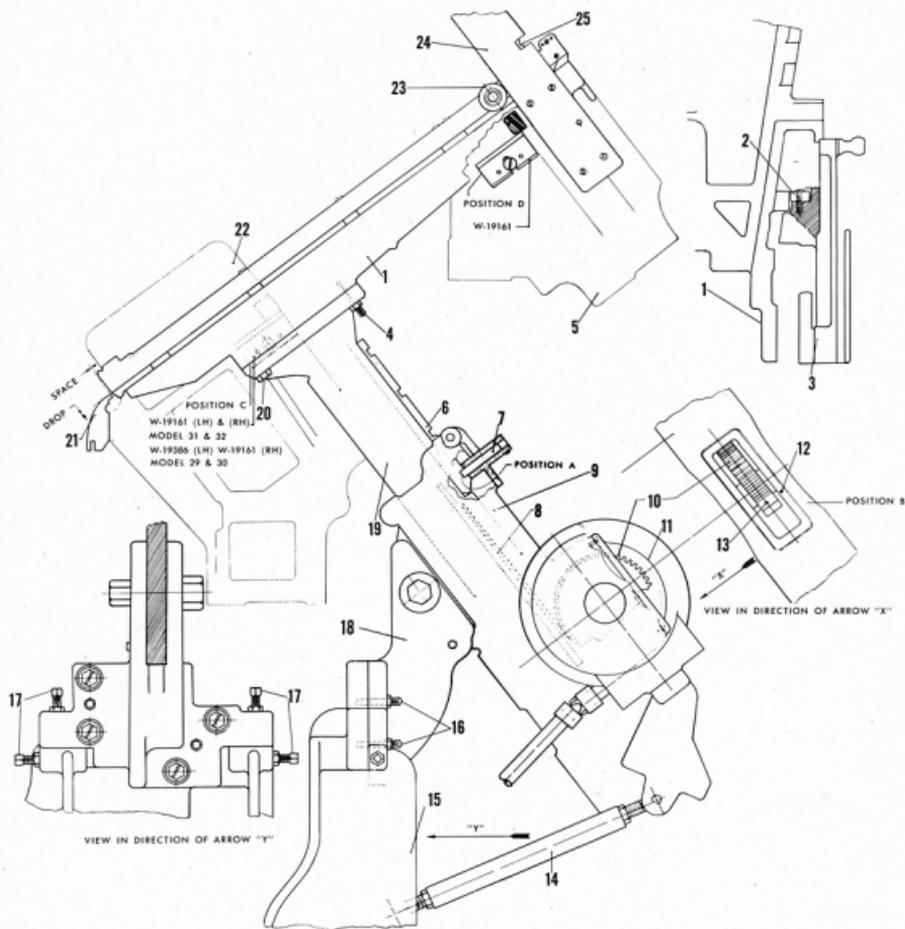


FIGURE 8

ASSEMBLE Face Plate 5 (**Fig. 9**) to Column and Distributor Bracket Support.

ASSEMBLE Escapement Lever Guide Support 10 (**Fig. 9**) to top of Face Plate Frame, making sure that projections on Escapement Levers are properly entered in slots in Escapement Rods. Fasten Guide Support to Stationary Front Guide Holder Brackets with Support Brackets (R.H.) 2 and (L.H.) 6.

ASSEMBLE Spaceband Key Lever and Bracket 8 (**Fig. 9**) to bottom of Escapement Lever Guide Support. Insert left-hand end of Key Lever into slot of Spaceband Box Pawl Lever and connect right-hand end to Spaceband Key Rod.

ASSEMBLE Magazine Elevating Shaft Crank Shaft Bracket 18 (**Fig. 6**) to Distributor Bracket Support at the same time placing Magazine Elevating Shaft Connecting Shaft and Universal Joints 8 in position between Crank Shaft Bracket and Magazine Elevating Shaft Bracket. If Handle 21 is not in vertical position disconnect the Coupling 11 and make necessary adjustment.

ASSEMBLE Distributor Driving Pulley 7 (**Fig. 11**) to end of Intermediate Shaft.

CONNECT Magazine Elevating Shaft Stop Pawl mechanism 6, 7, 14 and 16 (**Fig. 7**).

REMOVE cotter pins and tags from Drum Detents and wind Spring Drums 4 and 5 (**Fig. 7**) sufficiently to raise the Elevating Shaft 17 to its highest position to receive the Magazine Frame (Lower).

ASSEMBLE Step to machine.

ASSEMBLE Magazine Frame Guides 24 (**Fig. 8**) (R.H. and L.H.) to Magazine Frame (Lower).

ASSEMBLE Magazine Frame (Lower) 15 (**Fig. 7**) to Elevating Shaft 17.

REMOVE Magazine Frame Lower Shaft Lever (R.H.) from Lower Shaft and assemble Shaft and Handle 6 (**Figure 10**) through

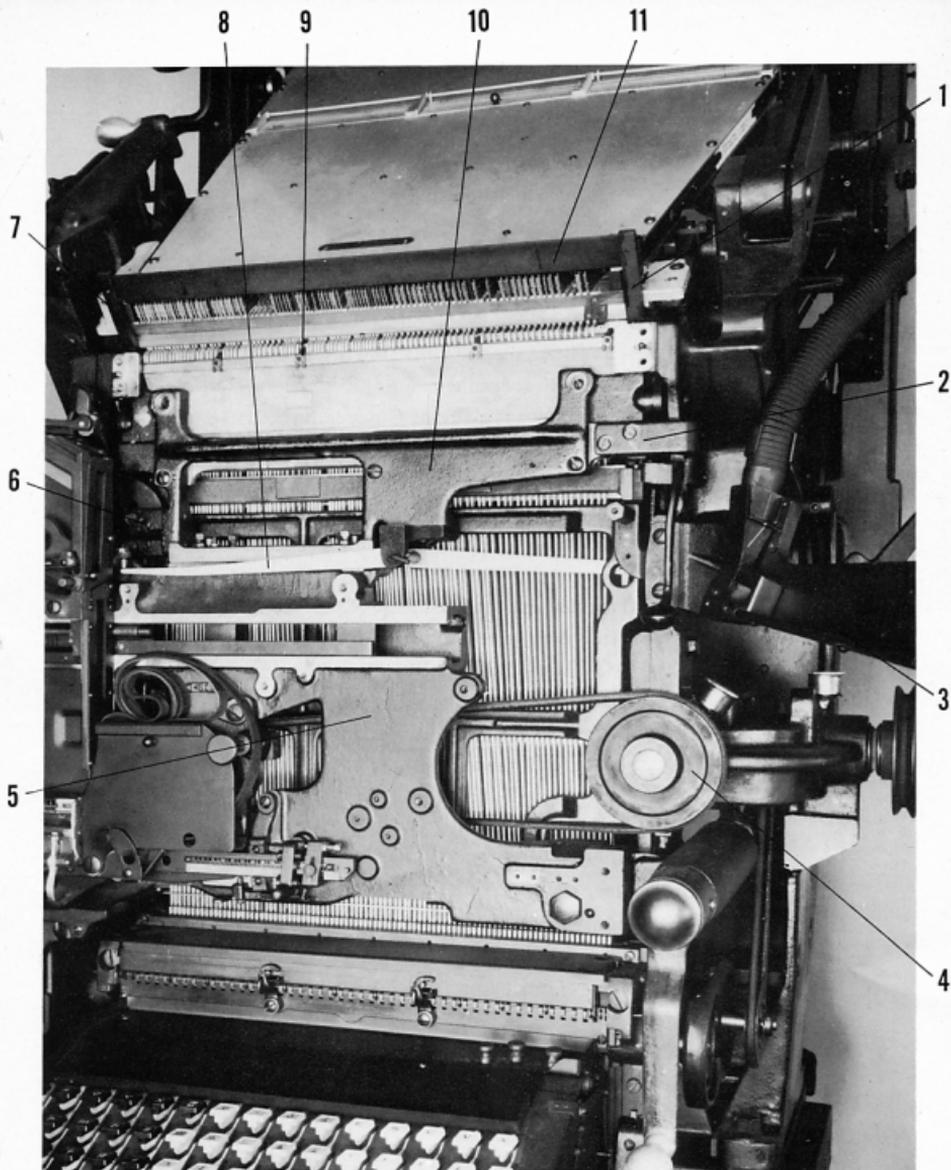


FIGURE 9

bearings in Magazine Frame (Lower); replace Lever on Shaft.

ASSEMBLE Escapement to Magazine Frame (Lower).

ASSEMBLE Magazine Frame Guide Gib (R.H.) 17 (**Fig. 13**) to Magazine Frame Guide (R.H.) 24 (**Fig. 8**).

ASSEMBLE two intermediate and one upper Magazine Frames and their Escapements, making certain that the proper Magazine Frame Guide Adjusting Pin and Block 25 (**Fig. 8**) are in each Guide slot. These pins and blocks are tied in place and care should be taken not to dislodge them during assembly.

ASSEMBLE Magazine Frame Guide Gib (L.H.) 16 (**Fig. 13**) to Magazine Frame Guide (L.H.).

ASSEMBLE Magazine (Upper) Locking Latches (R.H. and L.H.) to Magazine Frame (Upper).

ASSEMBLE Magazine Elevating Links (Long) 3 (**Fig. 10**), (Intermediate) 1 and (Short) 2 (L.H. and R.H.) to Magazine Frame (Upper) and to Levers (L.H. and R.H.) on Lower Shaft:

ASSEMBLE Magazine Elevating Link (Short) Safety Brackets 4 (**Fig. 10**) (L.H. and R.H.) to Distributor Bracket.

ASSEMBLE four Magazines to respective Frames, winding Spring Drums for sufficient tension.

ASSEMBLE Distributor 1 (**Fig. 6**) to Distributor Bracket.

ASSEMBLE Distributor Shifter Slide Latch 13 (**Fig. 10**) and Back Screw Bracket Spring Catch to Distributor.

ASSEMBLE Distributor Clutch Lever and Spring 2 (**Fig. 6**) to Distributor.

ASSEMBLE Distributor Screw Guard Lever 3 (**Fig. 6**) to Channel Entrance Bracket (R.H.).

ASSEMBLE Distributor Shifter Lever 12 (**Fig. 10**) to Shifter Lever Hub 1 (**Fig. 1**).

PLACE Distributor Shifter Slide 14 (**Fig. 10**) in guide on Distributor and connect to Shifter Lever Link.

ASSEMBLE Channel Entrance 1 (**Fig. 11**) to Channel Entrance

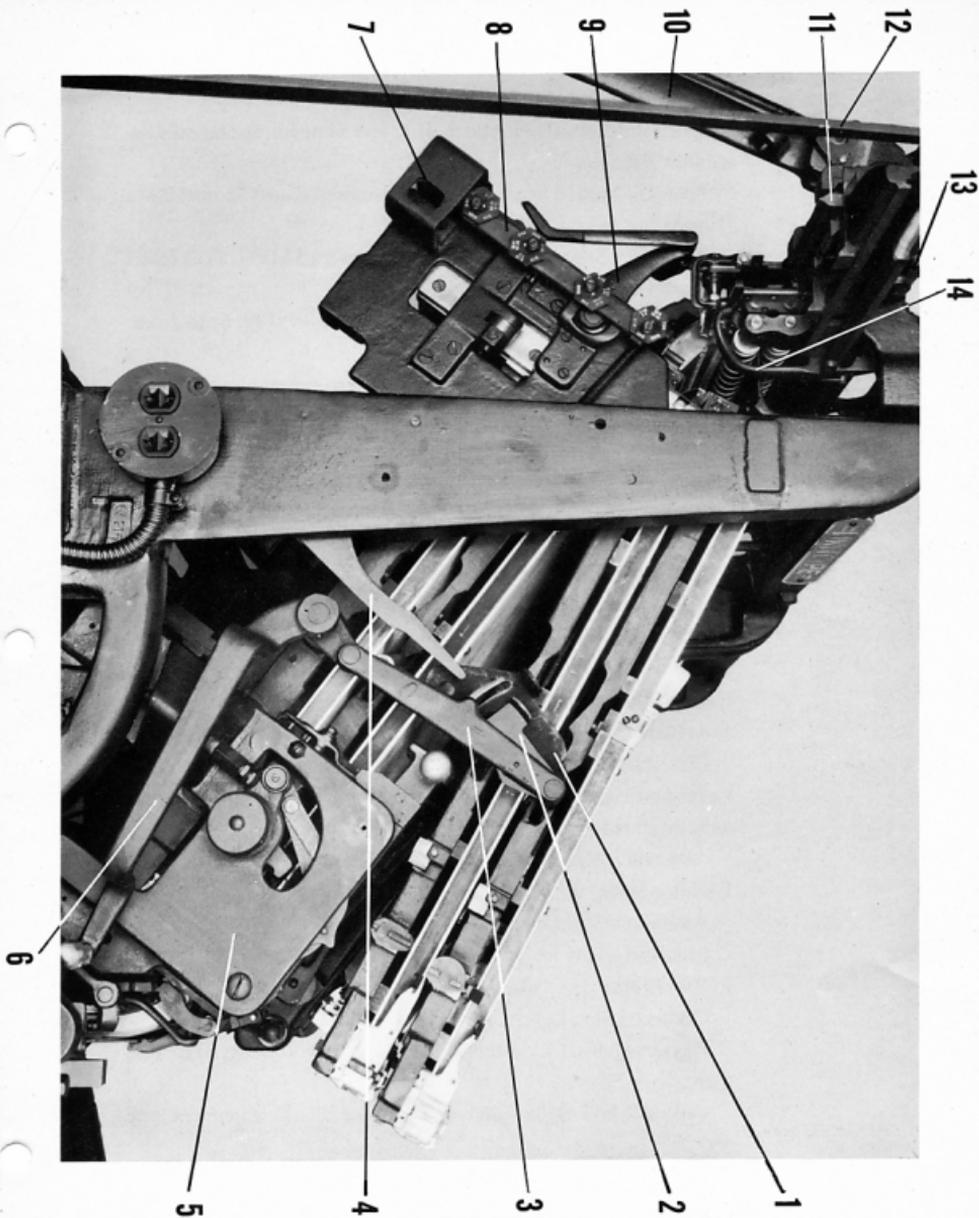


FIGURE 10

Support Brackets (R.H. and L.H.), and connect Spring to Distributor Bracket.

ASSEMBLE Quad Box 32 (**Fig. 5**) to Intermediate Channel Plate (Front).

ASSEMBLE Second Elevator Guide (Lower) 34 (**Fig. 5**) to Intermediate Channel Plate (Front).

ASSEMBLE Electric Light Holder Bracket 36 (**Fig. 5**) to Intermediate Channel Plate (Front).

ASSEMBLE Spaceband Buffer 1 (**Fig. 5**) to Assembler Slide Roll Bracket.

ASSEMBLE Line Delivery Link to Line Delivery Lever 24 (**Fig. 2**) and attach to Delivery Slide.

ASSEMBLE Finger 31 (**Fig. 5**) to Elevator Transfer Slide 29 and connect Slide and Link to Elevator Transfer Lever 18 (**Fig. 2**).

ASSEMBLE First Elevator Jaw Line Stop Transfer Rod Cover 30 (**Fig. 5**) to Face Plate.

ASSEMBLE First Elevator Slide 13 (**Fig. 5**) to Vise Frame and secure with Gibs 24 (L.H. and R.H.), at the same time applying Knife Wiper Bar Link 11 and Rod 4 and Galley Bracket (R.H.) 6 and (L.H.) 17.

CONNECT First Elevator Slide Link 12 (**Fig. 5**) to First Elevator Lever and check to see that First Elevator Slide aligns properly with Intermediate and Delivery Channels.

ASSEMBLE Knife Wiper Operating Lever 28 (**Fig. 5**) to First Elevator Slide.

ASSEMBLE Slug Lever 10 (**Fig. 5**) to Vise Frame.

ASSEMBLE Slug Lever Operating Arm Shaft Bracket 14 (**Fig. 5**) to Vise Frame.

CONNECT Slug Lever Link to back of Slug Lever 10 (**Fig. 5**).

ASSEMBLE First Elevator Slide Filling Piece 26 (**Fig. 5**) to Vise Cap.

CHECK Mold Slide "pull-up," Ejector Blade alignment and

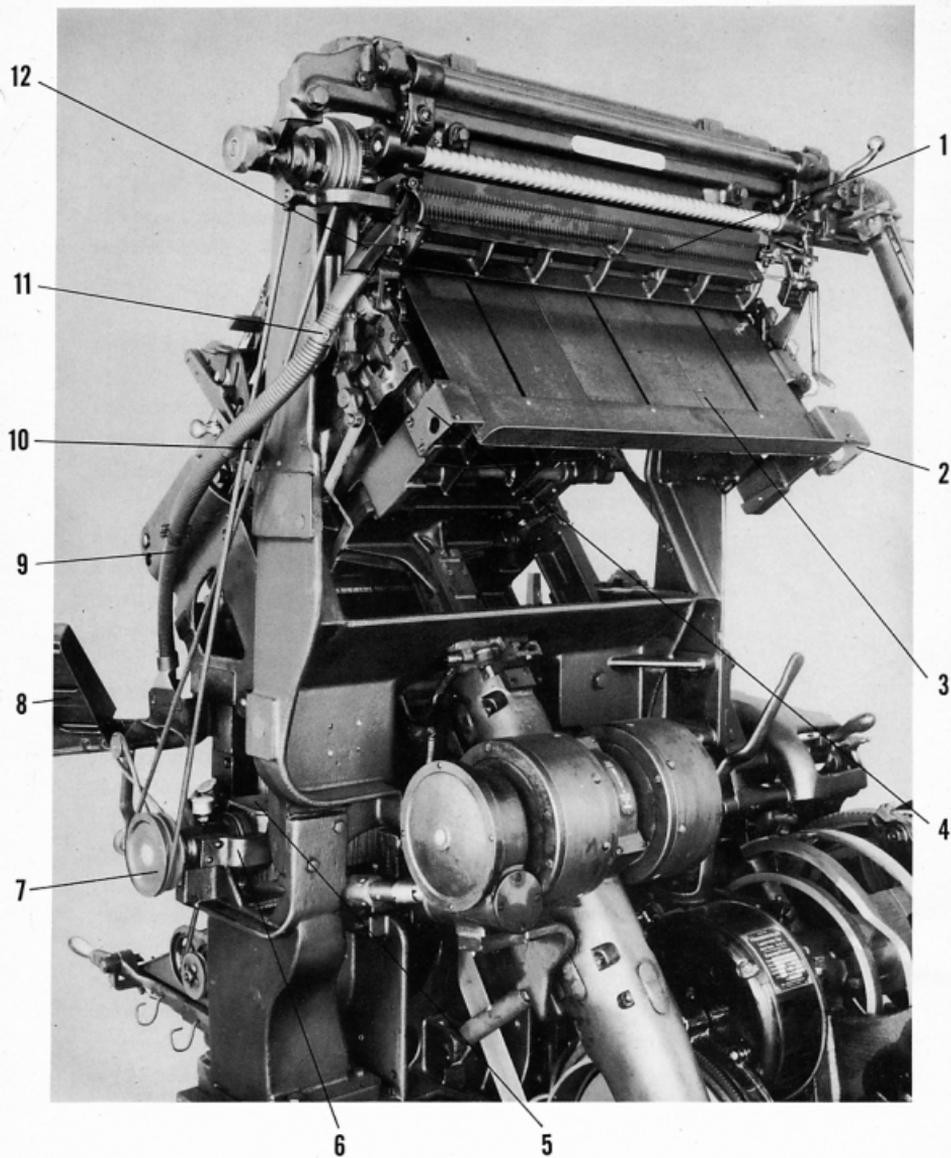


FIGURE 11

Mold Banking Blocks.

ASSEMBLE Knife Block 2 (**Fig. 5**) to Vise Frame.

ASSEMBLE Galley Slug Adjuster 3 (**Fig. 5**) to Vise Cap.

ASSEMBLE Ejector Blade Scale Bar 7 (**Fig. 5**) into slot in Delivery Channel Plate and connect to Ejector Controller Lever 8.

ASSEMBLE Knife Wiper Bar 1 (**Fig. 13**) to Knife Wiper Bar Link 11 (**Fig. 5**).

ASSEMBLE Distributor Box to Distributor.

ASSEMBLE Second Elevator 11 (**Fig. 10**) to Second Elevator Lever 10.

ADJUST Second Elevator Cam Roll 1 (**Fig. 3**) so that it is just free of Cam when Elevator is down in transfer position. Adjustment is made by means of Adjusting Bolt and Nuts 3. When Elevator is at upper position, the Adjusting Bolt should be free.

ASSEMBLE Escapement Lever Locking Shaft Operating Link (L.H.) 2 (**Fig. 7**) and (R.H.) 11 to side of Automatic Matrix Guard Support (L.H.) 18 and (R.H.) 12, and assemble Supports to Escapement Lever Guide Support. Connect the lower end of Links 2 and 11 to Automatic Matrix Guard Levers 3 and 8.

ASSEMBLE Automatic Matrix Guard 11 (**Fig. 9**) to Matrix Guard Supports 7 and 1.

ASSEMBLE Escapement Lever Cover 14 (**Fig. 13**) to back of Escapement Lever Guide Support and secure to top front of Guide Support with four Cover Clips 9 (**Fig. 9**).

ASSEMBLE Assembler Entrance 8 (**Fig. 12**), Stationary Front Guide Holder 9 and Assembler Entrance Cover 10 to Stationary Front Guide Holder Brackets (L.H. and R.H.) and to Face Plate, adjusting sideways so that the left-hand side of Guides line with right-hand side of Magazine Channels; add Assembler Entrance Cover Support to left-hand side of the Stationary Front Guide Holder.

ASSEMBLE Assembler Chute Finger and Spring 7 (**Fig. 12**) to



FIGURE 12

Assembler Entrance.

ASSEMBLE Assembling Elevator Lever and Shaft 17 (**Fig. 6**) through front bearings of Keyboard Frame. Connect Counterbalance Spring 16 to Keyboard Frame.

ASSEMBLE Pi Stacker 3 (**Fig. 9**) to Front Guide Holder Bracket (R.H.).

ASSEMBLE Pi Chute (Upper) 12 (**Fig. 11**) to Channel Entrance.

ASSEMBLE Pi Stacker Tube 9 (**Fig. 11**) to right-hand side of machine with two Brackets 10 and 11.

ASSEMBLE Sorts Box Bracket 8 (**Fig. 11**) to Pi Stacker. Attach Sorts Box.

ASSEMBLE Distributor Box Font Distinguisher Indicator Bracket 8 (**Fig. 10**) to Magazine Frame (Lower), and Font Distinguisher Lever and Bracket 9 to Channel Entrance Bracket (L.H.).

ASSEMBLE Matrix Tray 3 (**Fig. 11**) and Brackets (R.H.) 4 and (L.H.) 2 to Channel Entrance Brackets (L.H. and R.H.).

ATTACH Assembler Driving Belt to Pulleys.

ASSEMBLE Idler Pulley 1 (**Fig. 12**) and Tension Pulley 2 to Assembler Entrance Plate, and attach Matrix Delivery Belt 3.

REMOVE Assembler Slide Stop 5 (**Fig. 12**) from Face Plate Frame and assemble Face Plate Frame Cover and Assembler Slide Return Spring 4 to Face Plate Frame. Assemble Slide Stop to Cover and connect Return Spring to the Assembler Slide.


ATTACH all belts.

ASSEMBLE Spaceband Instruction Plate 33 (**Fig. 5**) to Intermediate Channel (Back) Plate.

APPLY Metal Pan to left-hand side of Base.

HOOK up electrical connections on Pot Heaters, Electric Light and Motor or hook up gas connections if gas heated. See "Instructions to Linotype Operators and Machinists" for directions.


FILL pot with metal and turn on current or gas.

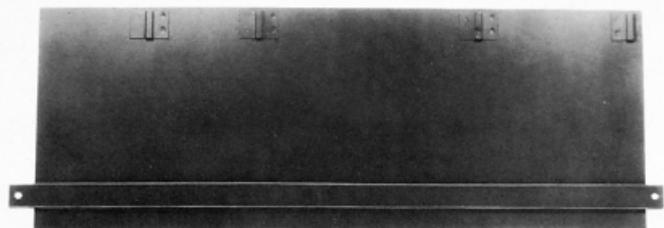

14



11

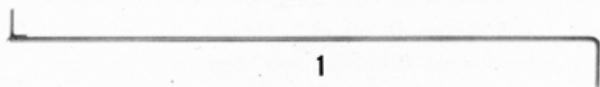


1



7




2

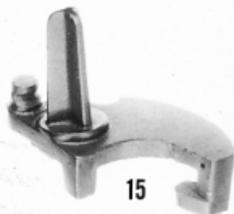

15



9

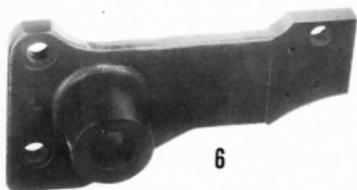

6



10



13



3



4



5



12



17



8



16

FIGURE 13

REMOVE nails 13 and 15 (**Fig. 1**) and tags from Justification and Vise Closing Springs.

OIL all shafts and rollers and other parts as indicated by oil holes and oil hole caps. Turn down all grease cups.

CHECK alignment of Distributor Box Rails to Distributor Bar and Bar Point to Rails. Also check setting of Distributor Box Lift.

SEE that all Distributor parts contacting matrices are thoroughly clean and clean Magazines with brush.

RUN matrices through Distributor into Magazines (Main and Auxiliary).

ADJUST Spring Drums for proper tension.

CHECK for "Space" (.025 to .045) and "Drop" (.015 to .030) at Delivery point of Lower Magazine (**Fig. 8**). A variation of .005 from one side to the other is permitted. If this condition does not exist, check for correct location of lower Magazine Frame 1 (**Fig. 8**) by means of the four checking Blocks (W-19161) provided for that purpose. Use Block W-19161 on Front Guide Holder Bracket (L.H.) 22 and (R.H.) 3 as shown at position C, and on each Channel Entrance Bracket 5 as shown at position D. Match lower edges of Blocks with scribed lines on Brackets. If lower Magazine Frame 1 does not contact these Blocks within reasonable limits (.001 to .005), the Magazine Elevating Shaft will have to be reset. This may be done in usual manner by means of the Adjusting Screws 17 and the Turnbuckle 14.

REMOVE Guide Pins 16 (**Fig. 8**) before this adjustment is made. They need not be replaced as they are used merely as a guide in erecting the machine and serve only as an indication of the original relationship of the parts as set up in the factory.

CHECK the horizontal position of Magazine Frame 1 (**Fig. 8**) with respect to the side Adjusting Blocks (L.H. and R.H.) 2. The left-hand Block is pinned in place and should not be altered, while the right-hand Block 2 may be adjusted if desired.

REMOVE the four checking Blocks from left and right sides.

CHECK to see that Magazine Frame Eccentric Stud Rollers 23 (Fig. 8) on both left and right sides are in contact with Rails 24 when third or fourth Magazines are in operating position. The rollers may clear when the upper Magazine is in operating position.

CHECK "Space" and "Drop" of Intermediate and Upper Magazine Frames; if necessary adjust by means of Frame Guide Adjusting Pins and Blocks 25 (Fig. 8) in Guide (L.H. and R.H). 24 and Adjusting Banking Studs screwed to Frames through Escapements.

CHECK Pot Lock-up when Pot is heated sufficiently.

ARRANGE Pot Lever Spacing Washers so that Roll is central with Cam.

CHECK transfer alignment of Second Elevator Bar and First Elevator Jaw.

CHECK alignment of First Elevator Slide to Delivery Channel.

CHECK for proper height of First Elevator Slide with respect to Mold and matrices and check matrix alignment of Mold and First Elevator Jaw.

CHECK action of Vise Automatic Stop Rod.

CHECK Mold Slide adjustment (.003 to .005" Shake).

CHECK action of Mold Slide Safety to stop machine at first and second position.

CHECK all parts that may contact matrices in their complete cycle for oil or grease.

ASSEMBLE matrices and spacebands and circulate through machine, checking all pertinent adjustments.

CHECK Pot Pump Safety (Duplex Display); adjust at point of compression. Safety Stop Lever should clear Catch Block.

CHECK action of Pot Pump Lever Stop Lever Operating Lever. Stop Lever should clear Catch Block 1/64".

INSERT Pot Pump Plunger in Pot Well and connect to Pot Pump Lever.

Before Placing Machine in Production

AFTER having completed the erection of your machine, it is recommended that slugs be cast, and that you test and make final setting of side and back knives, measuring slug for body and height. Cast in each position to make certain of side knife setting. Also check margin at ends of slug.

Assemble all remaining Guards and Covers to machine.

• LINOTYPE •

MERGENTHALER LINOTYPE COMPANY
29 Ryerson Street Brooklyn 5, New York

Agencies

New York	Brooklyn, 29 Ryerson Street
Chicago	531 Plymouth Court
San Francisco	638 Sacramento Street
Dallas	514 Browder Street
Atlanta	300 Luckie Street, N. W.
Cleveland	2536 St. Clair Avenue

Boston Office of New York Agency

Boston Park Square Building

Los Angeles Office of the San Francisco Agency

Los Angeles 1515 Georgia Street

Canadian Linotype, Limited

Toronto 675 King Street West

Representatives in all Principal Cities